

PARTS LIST

for

KitchenAid®

27" ELECTRIC BUILT-IN SUPERBA MICROWAVE/CONVECTION COMBINATION OVEN

MODEL
KEMS376SBL1
▲

▲BL-Black Glass




FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS



CONTROL PANEL PARTS

For Model: KEMS376SBL1

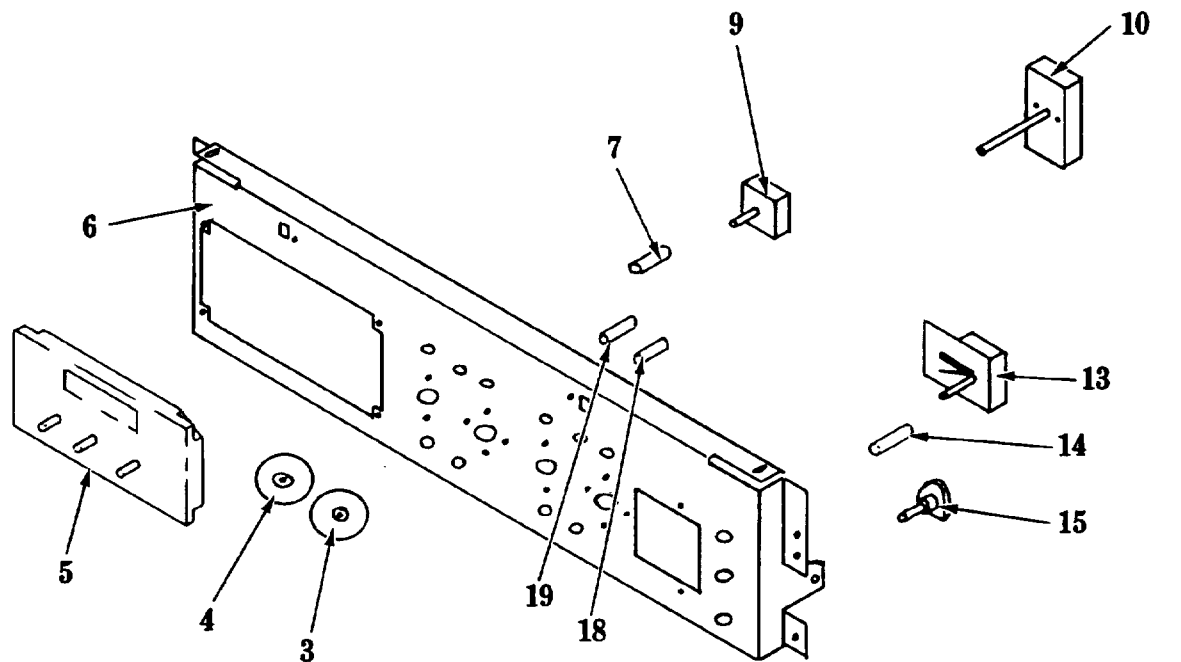

PL-19847-1

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


3	4163809	Thermostat Disc
4	4163800	Selector Disc Upper Oven
5	4173071	Electronic Timer
6	4164218	Panel, Control Mounting
7	4168597	Light, Oven Indicator
9	4163727	Switch, Selector
10	4164362	Thermostat
13	4163730	Meat Probe Indicator
14	4168597	Light, Indicator (Power On)
15	4169365	Switch, Oven Light
18	4163869	Light, Lock Indicator
19	4163869	Light, Clean Indicator

Following Parts Not Illustrated

4173229	Harness, Wiring (Control Compartment)
4173083	Harness, Wiring (Element)

CONTROL FRAME AND KNOB PARTS

For Model: KEMS376SBL1

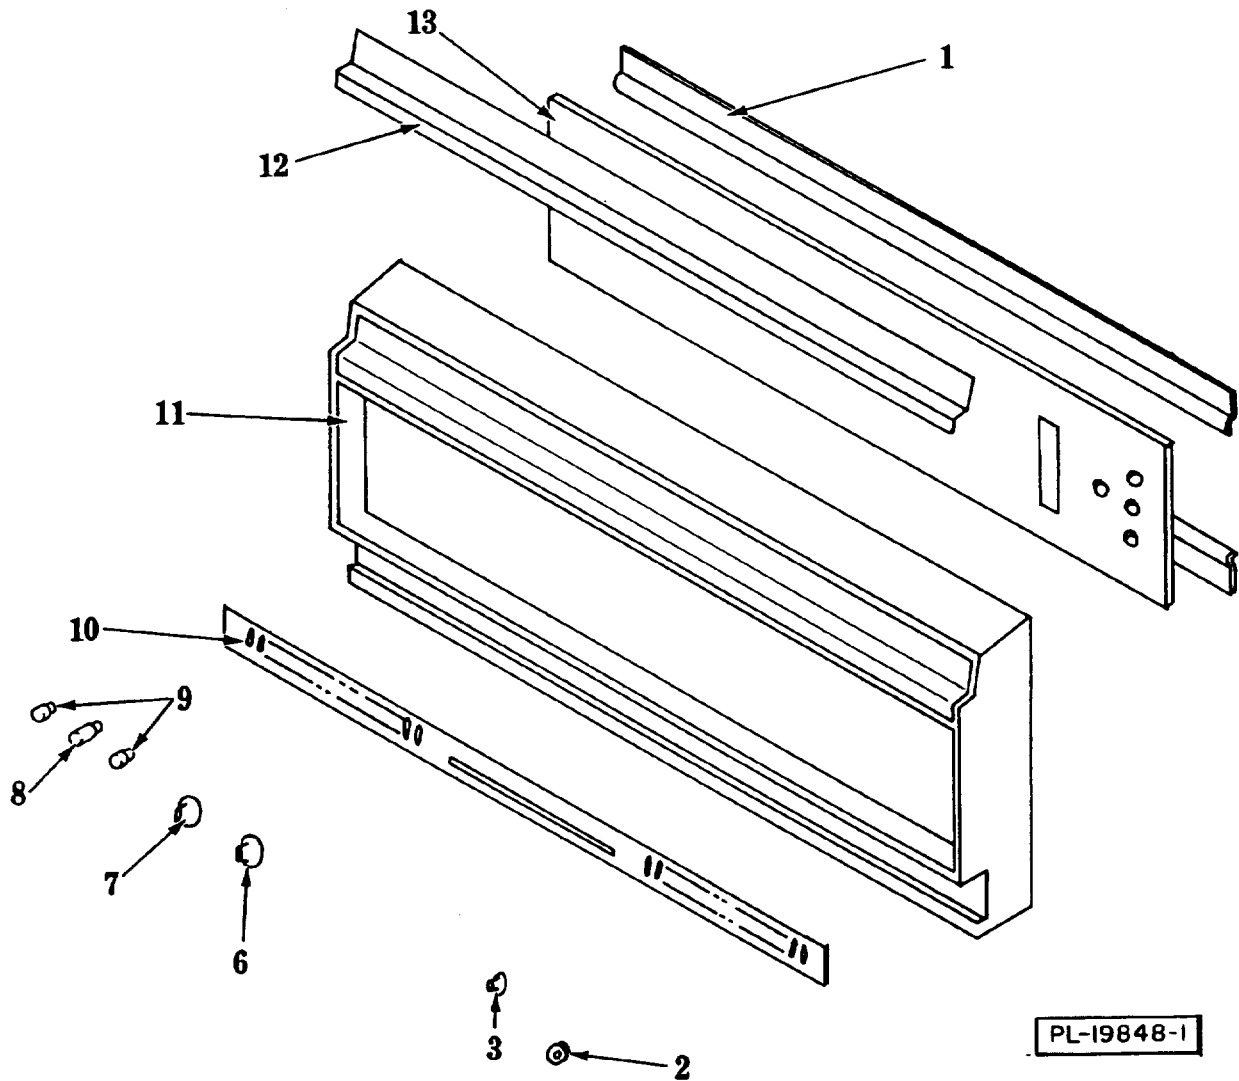


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	4167590	Retainer
2	4169372	Bezel, Oven Light Switch
3	4163840	Knob, Meat Probe Indicator
6	4168403	Knob, Thermostat
7	4168403	Knob, Selector Switch
8	4164356	Knob, Timer (Rotary Control)
9	4164357	Knob, Timer (Push Button Control)
10	4168678	Vent Insert
11	4164363	Control Frame
12	4163744	Top Insert
13	4164347	Control Panel Frame

CONTROL COMPARTMENT AND CABINET TOP PARTS

For Model: KEMS376SBL1

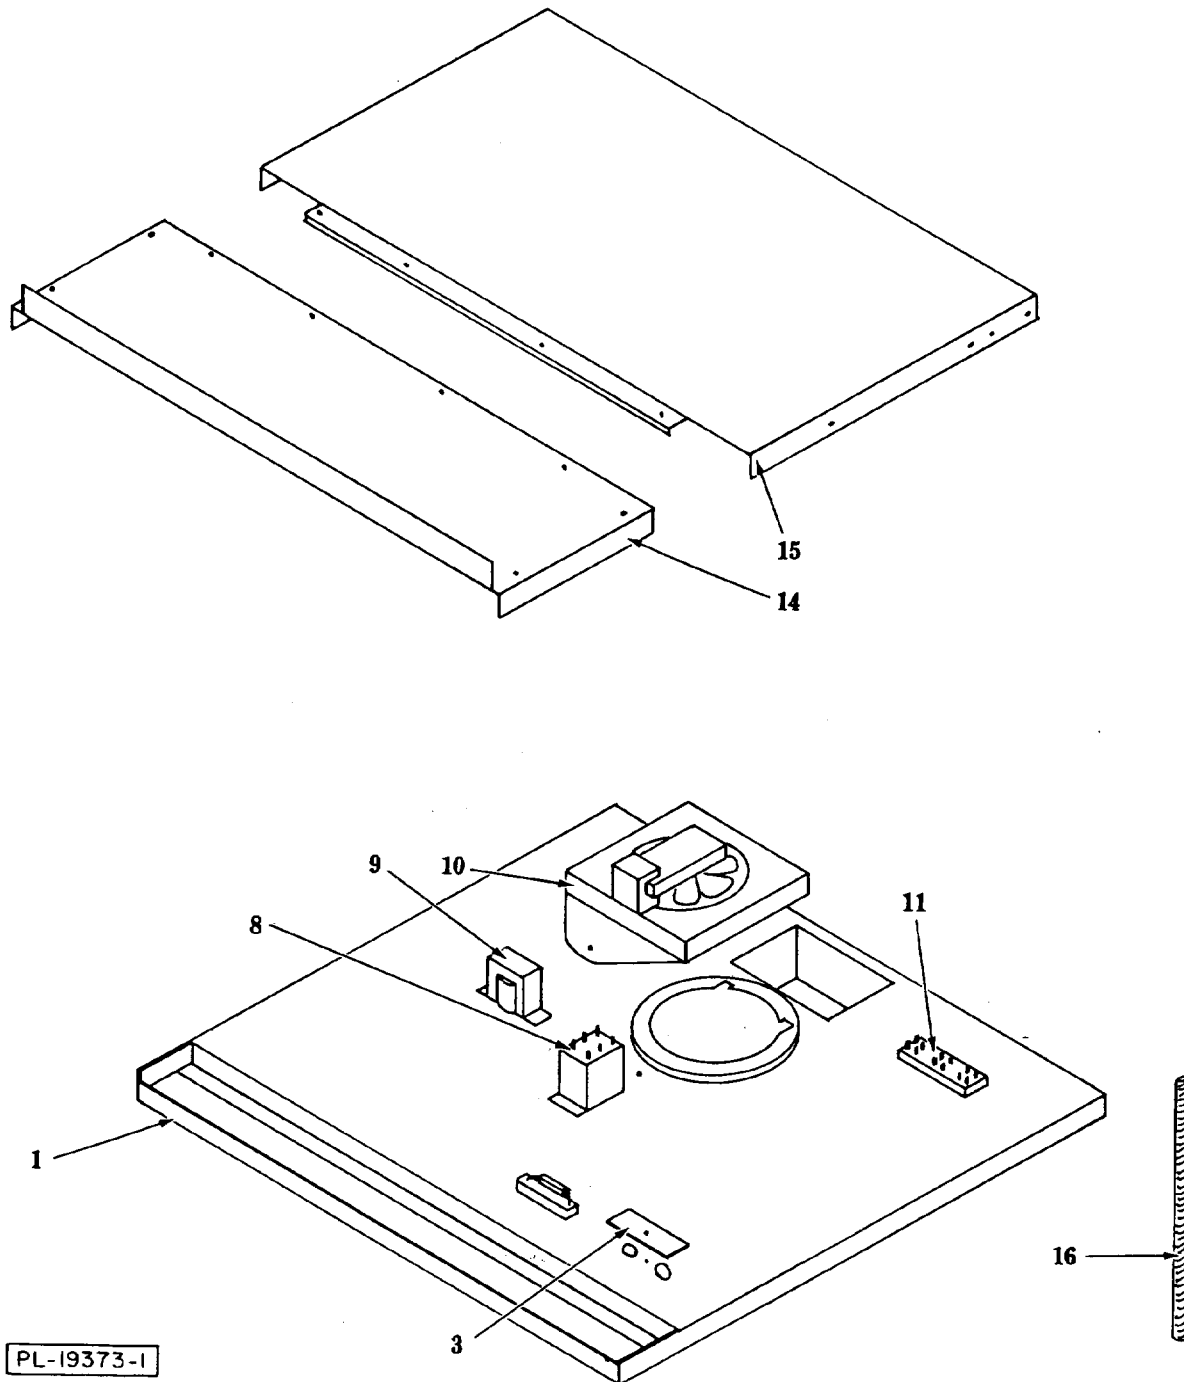


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	4173072	Sandwich Panel
3	4168257	Hole Cover
8	4163731	Meat Probe Relay
9	4166561	Transformer, Meat Probe
10	4168290	Blower Assembly
11	4168735	Terminal Block, Power Supply
14	4164009	Top, Cabinet Front
15	4168262	Top, Cabinet Rear
16	4167614	Conduit, 1/2" X 56"

LATCH PARTS

For Model: KEMS376SBL1

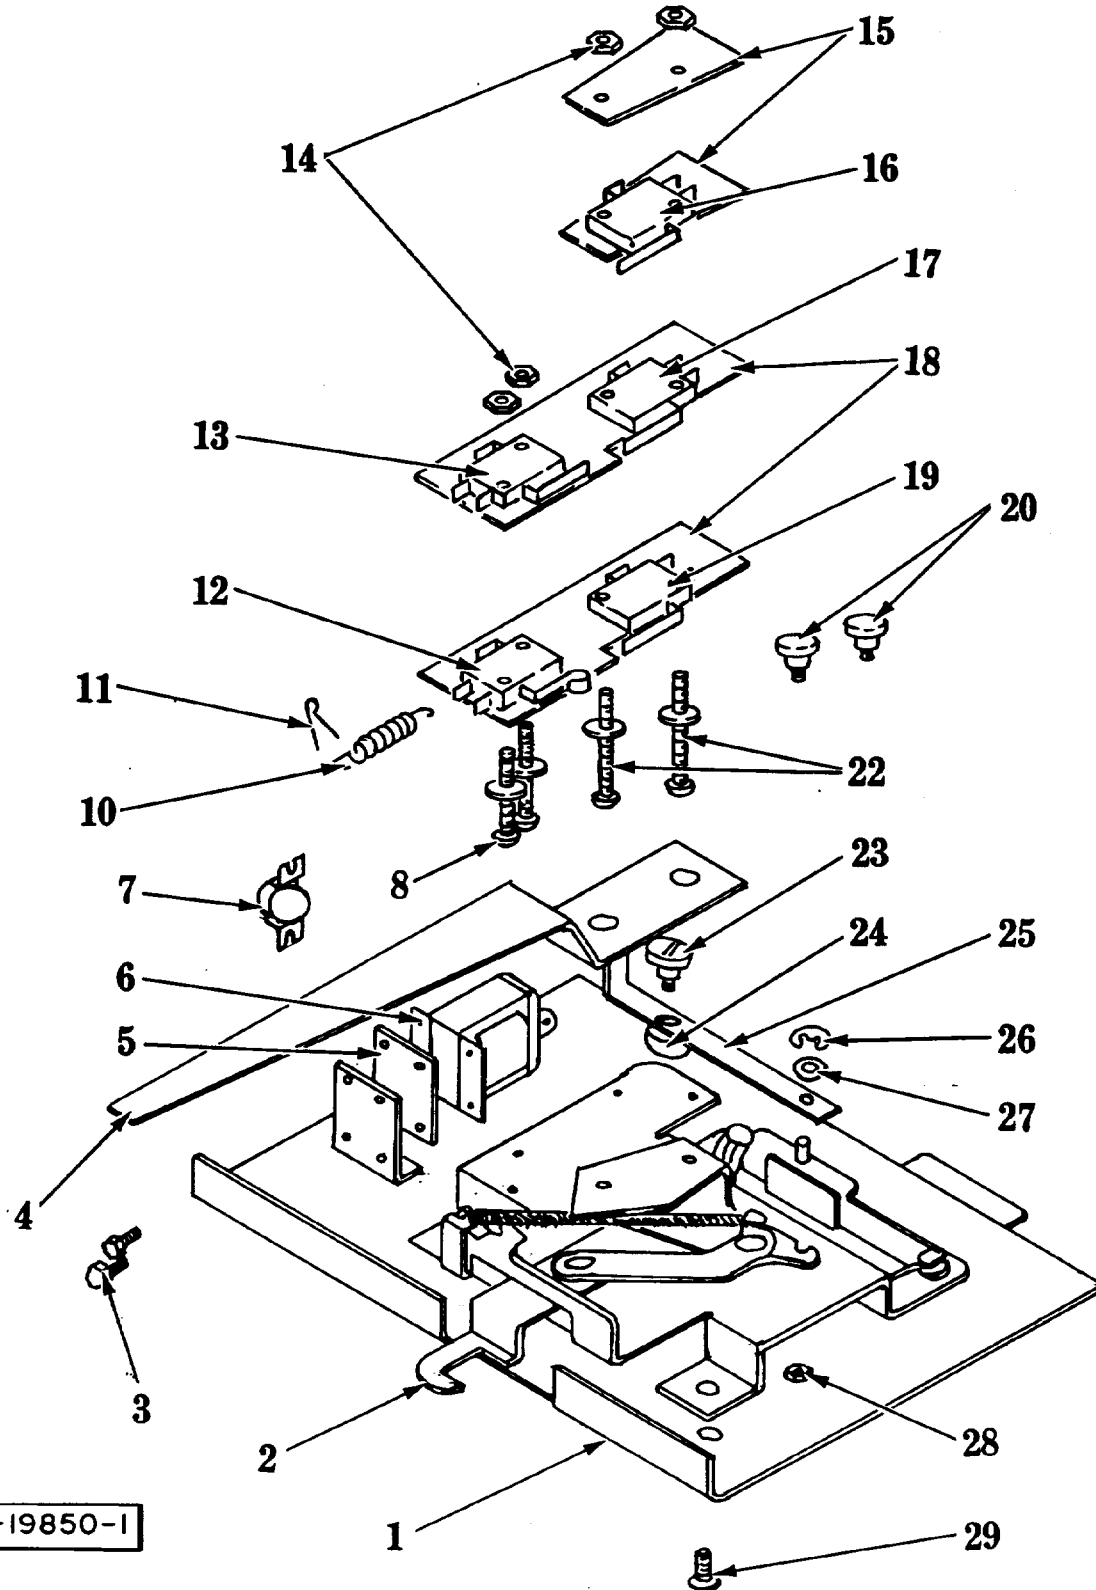

PL-19850-1

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


1	4173073	Latch Mounting Plate
2	4168538	Latch Mechanism
3	4159186	Screw, #10-24 X 3/8" Hex TCS
4	4163838	Latch Lever
5	4168169	Solenoid Spacer
6	4169323	Solenoid
7	4173007	Thermal Switch
8	4173074	Screw, 4-40 X 1 1/4
10	4168560	Solenoid Spring
11	4159129	Cotter Pin
12	4168514	Latch Switch With Roller
13	4164366	Latch Switch Normally Open
14	4159117	Locknut
15	4163746	Insulator, Switch
16	4164367	Latch Switch
17	4168517	Latch Switch
18	4168522	Insulator
19	4168517	Latch Switch
20	4168579	Screw, Latch Lever Shoulder
22	4173075	Screw, Machine 4-40 X 1 3/4 (Hex)
23	4168554	Screw, Actuator Arm Shoulder
24	4168553	Spacer, Actuator Arm
25	4168058	Actuator Arm
26	4159160	Retaining Ring
27	4159603	Washer, Flat
28	4159109	Nut, #10-24 Hex Kep
29	4159287	Screw, #10-24 X 3/8" PTHMS

Following Parts Not Illustrated

4169362	Spacer, Latch Lever
4164403	Wiring Harness, Latch

For Model: KEMS376SBL1

For Model: KEMS376SBL1

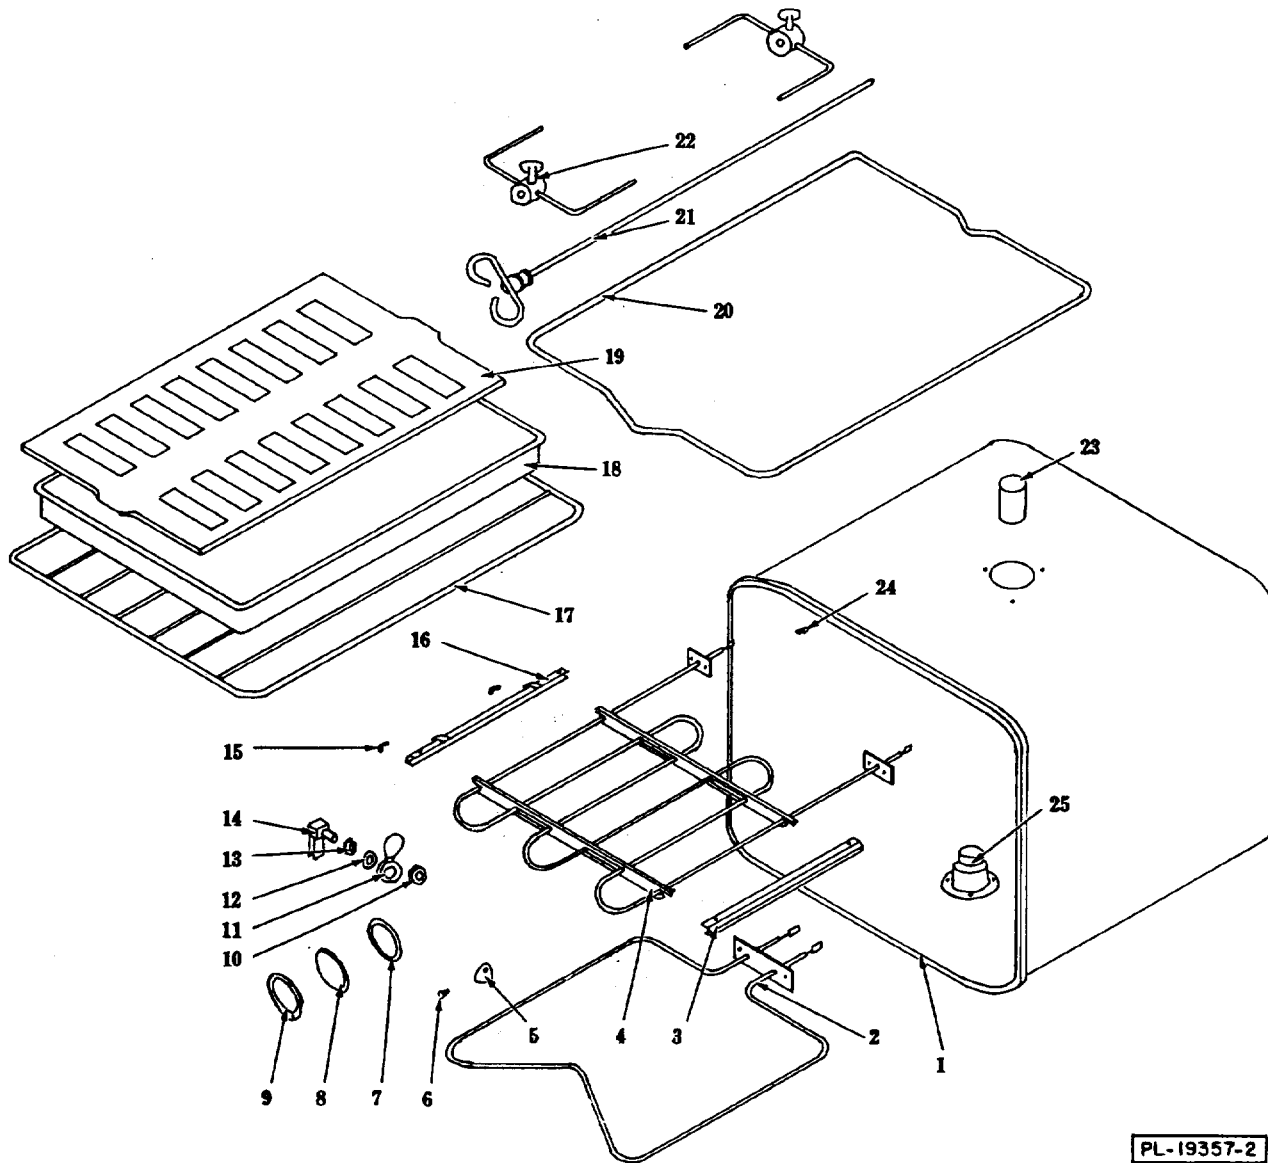

PL-19357-2

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


1	4164581	Liner, Oven
2	4163990	Bake Element
3	4168217	Broiler Element Support-Right
4	4164185	Broiler Element
5	4167518	Rotisserie Cover
6	4168874	Shoulder Screw
7	4166868	Light Lens Gasket
8	4166866	Light Lens
9	4167938	Light Lens Retainer
10	4167277	Nur, Meat Probe
11	4167266	Probe, Jack Cover
12	4159557	Washer
13	4159113	Nut, Hex Jamb
14	4164293	Meat Probe Jack
15	4166287	Thermostat Bulb Clip
16	4168218	Broiler Element Support-Left
17	4168401	Oven Rack
18	4164371	Broiler Pan
19	4164371	Broiler Pan Grid
20	4168412	Rotisserie Rack
21	4168724	Rotisserie Spear
22	4166352	Rotisserie Skewer
23	4168126	Vent Tube Extension
24	4168203	Capillary Cover
25	4168492	Smoke Eliminator

Following Parts Not Illustrated

4163975	Gasket, Meat Probe Jack
4167267	Meat Probe

OVEN DOOR PARTS

For Model: KEMS376SBL1

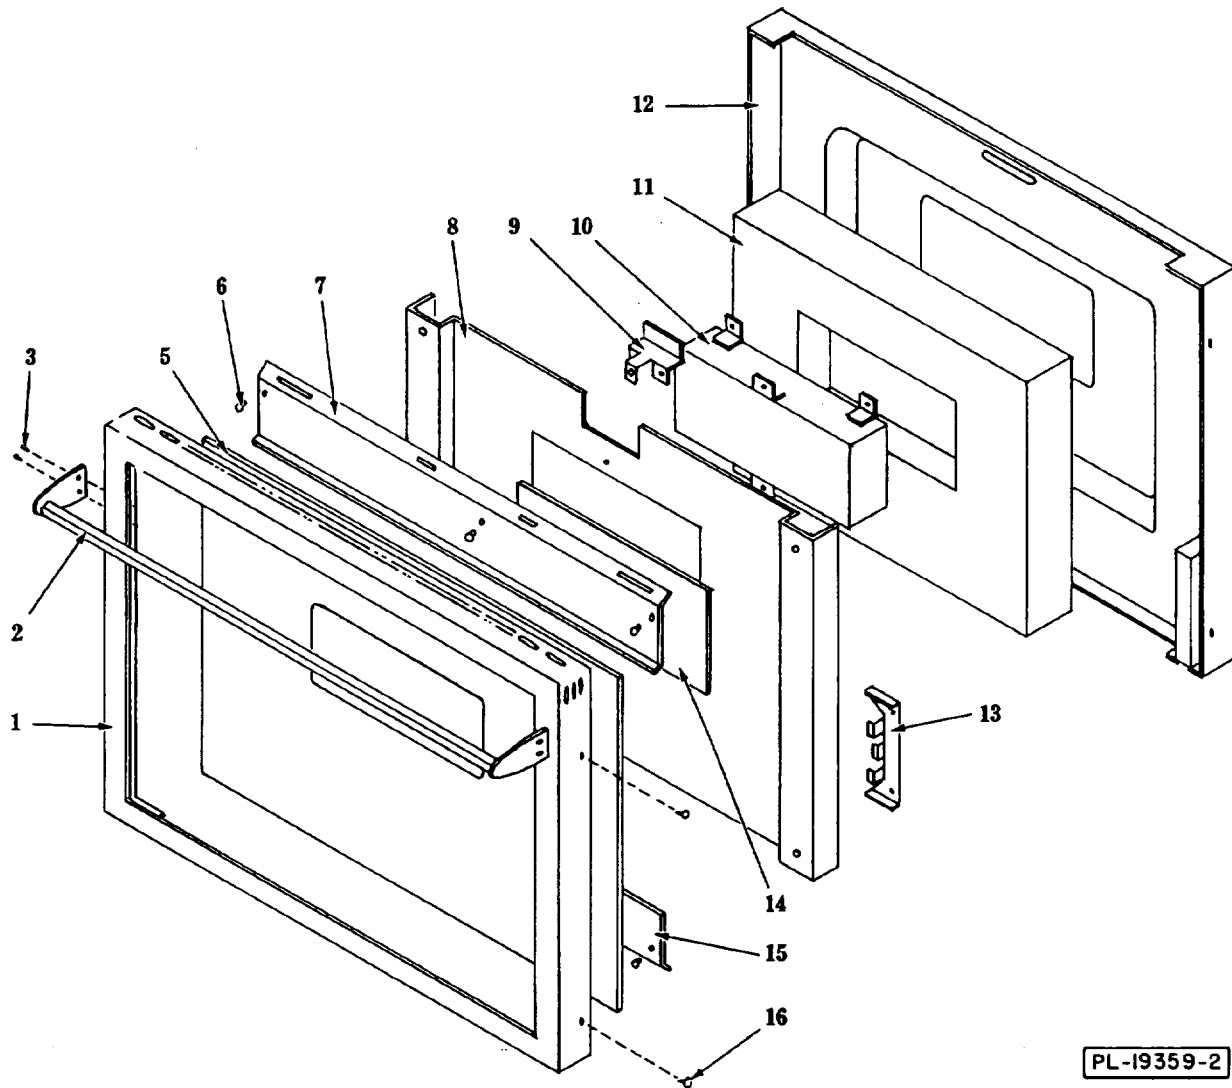

PL-19359-2

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST


1	4164386	Door Frame
2	4173018	Door Handle
3	4159330	Screw, #8-32 X 3/8" PFHMS
5	4164241	Door Glass
6	4168826	Rubber Bumper
7	4163857	Air Baffle
8	4169357	Insulation Retainer
9	4163852	Latch Bracket
10	4164235	Window Pack
11	4163987	Insulation
12	4164237	Door Liner
13	4163855	Glass Mounting Bracket
14	4164243	Glass Panel
15	4163859	Air Baffle Bottom
16	4168863	Screw, 8A X 3/8" PKESMS

LITERATURE PARTS

LIT4174012	Installation Instructions
LIT4177646	Use & Care Guide
LIT4174011	List, Repair Parts

CABINET PARTS

For Model: KEMS376SBL1

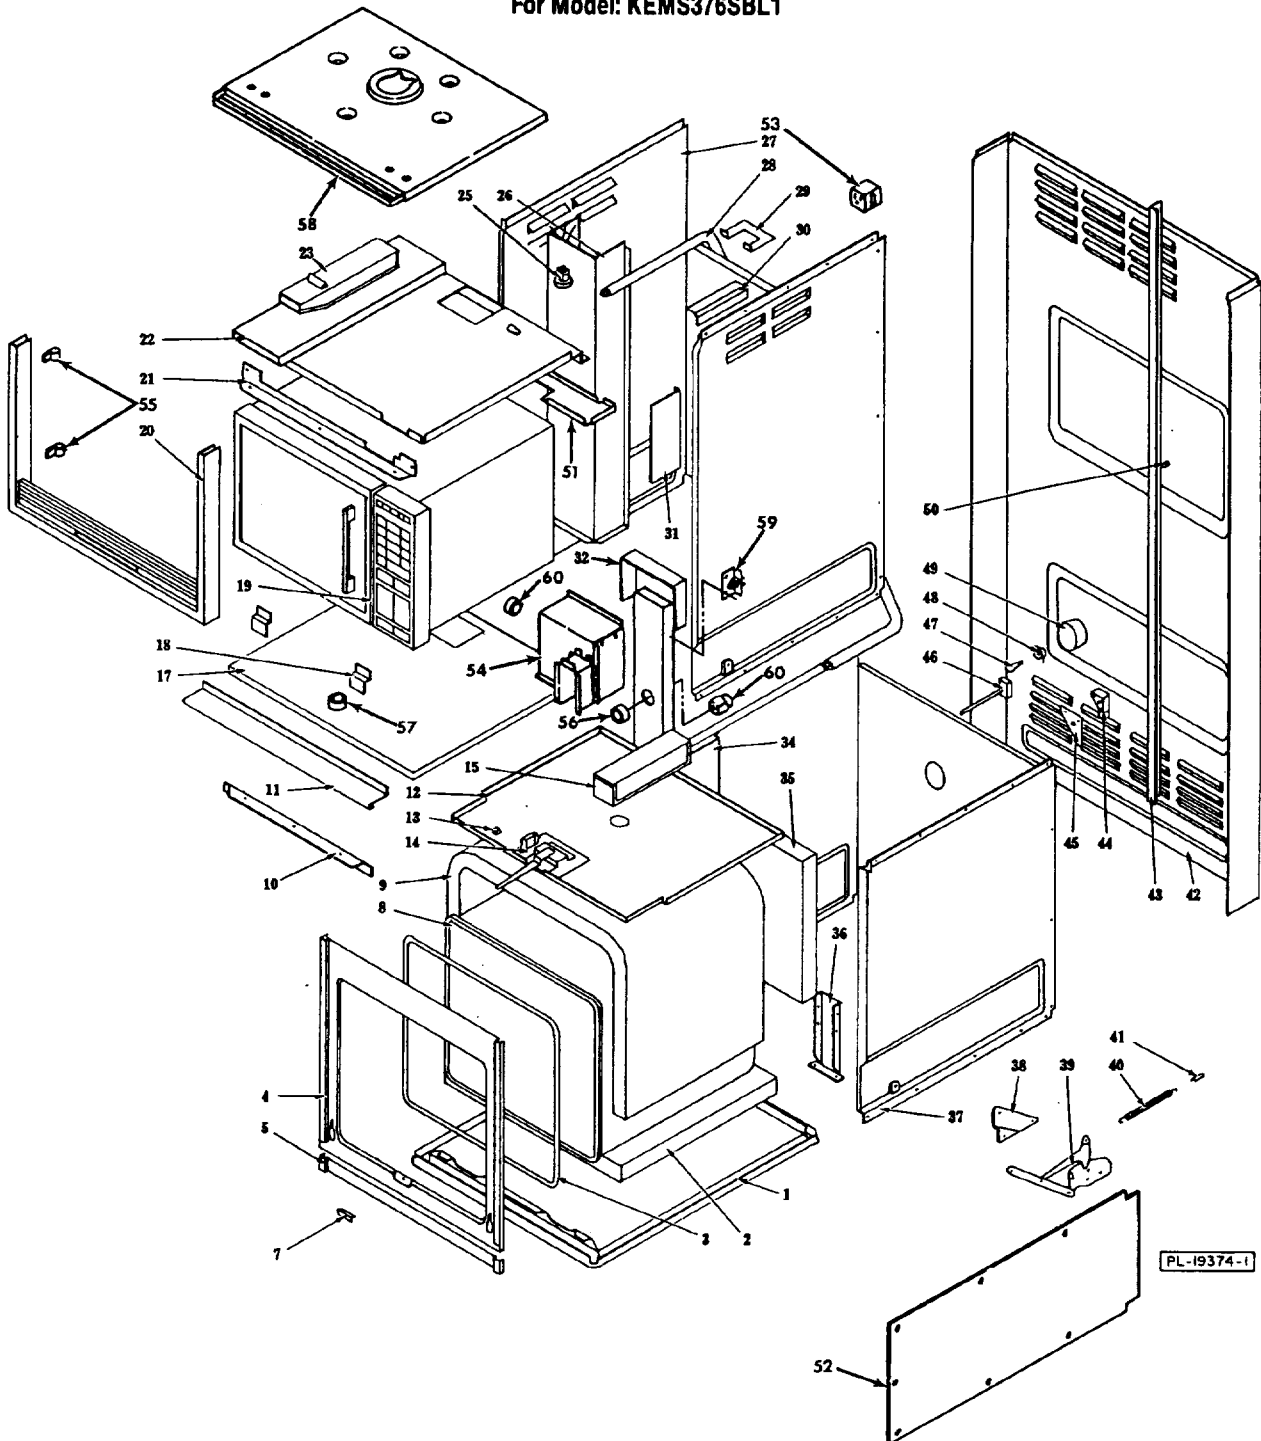

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	4173076	Main Bottom (Includes Oven Support And Main Bottom)
2	4164191	Insulation, Bottom
3	4168829	Door Gasket
4	4163823	Front Frame
5	4164196	Bottom Trim
7	4167588	Cover, Seal End
8		Oven Liner (See Page 8)
9	4169310	Insulation, Top and Sides
10	4169336	Control Frame Support
11	4164584	Module Air Baffle
12	4169314	Compartment Top
13	4163821	Knob, Latch Handle (Clean)
14		Latch (See Pages 6 & 7)
15	4168135	Collector Box
17	4173077	Module Support (Includes Brace And Plate)
18	4164407	Module Brace
	4164587	Shim
19		Microwave Module (Complete Unit Not Available. Order Component
		Parts.)
20	4164310	Module Trim
21	4167693	Control Frame Support
22	4169514	Exhaust Shield
23	4164312	Vent Box
25	4159030	Strain Relief Bushing
26	4164309	Cabinet Back Duct
27	4163726	Cabinet Side Upper
28	4168591	Vent Tube
29	4168140	Vent Tube Retainer
30	4168311	Cabinet Side Extension
31	4164311	Trim Bracket
32	4173082	Intake Duct
34	4163758	Air Duct, L.H.
35	4164192	Insulation, Rear
36	4167526	Rear Anchor
37	4173080	Cabinet Side, Lower
38		Cam Plate R.H.
	4167597	R. H.
	4167598	L.H.
39	4167596	Hinge Assembly
40	4173048	Door Spring
41	4167599	Spring Anchor
42	4164297	Cabinet Back
43		Cabinet Support
	4163767	R.H.
	4163768	L.H.
44	4163836	Rotisserie Motor
45	4167469	Rotisserie Motor Mounting Plate
46	4168550	RT Thermostat
47	4173062	Bulb 40 Watt
48	4168755	Light Socket
49	4167579	Oven Light Shield
50	4168590	Spacer
51	4164337	Intake Exhaust Baffle
52	4164336	Side Panel
53	4164406	Snap In Outlet
54	4173082	Fan Cover (Includes Fan)
55	4164586	Capillary Clip


56	4159046	Electrical Bushing
57	4173043	Electrical Bushing
58	4173072	Sandwich Panel
59	4173085	Safety Switch (Includes Resistor Block And Thermostat Disc)
60	4164600	Strain Relief

Following Parts Not Illustrated

4164403	Wiring Harness (Lower Latch)
4164401	Wiring Harness Meat Probe
4164402	Wiring Harness (Low Temp)
4173083	Wiring Harness (High Temp)

MICROWAVE CONTROL PANEL PARTS

For Model: KEMS376SBL1

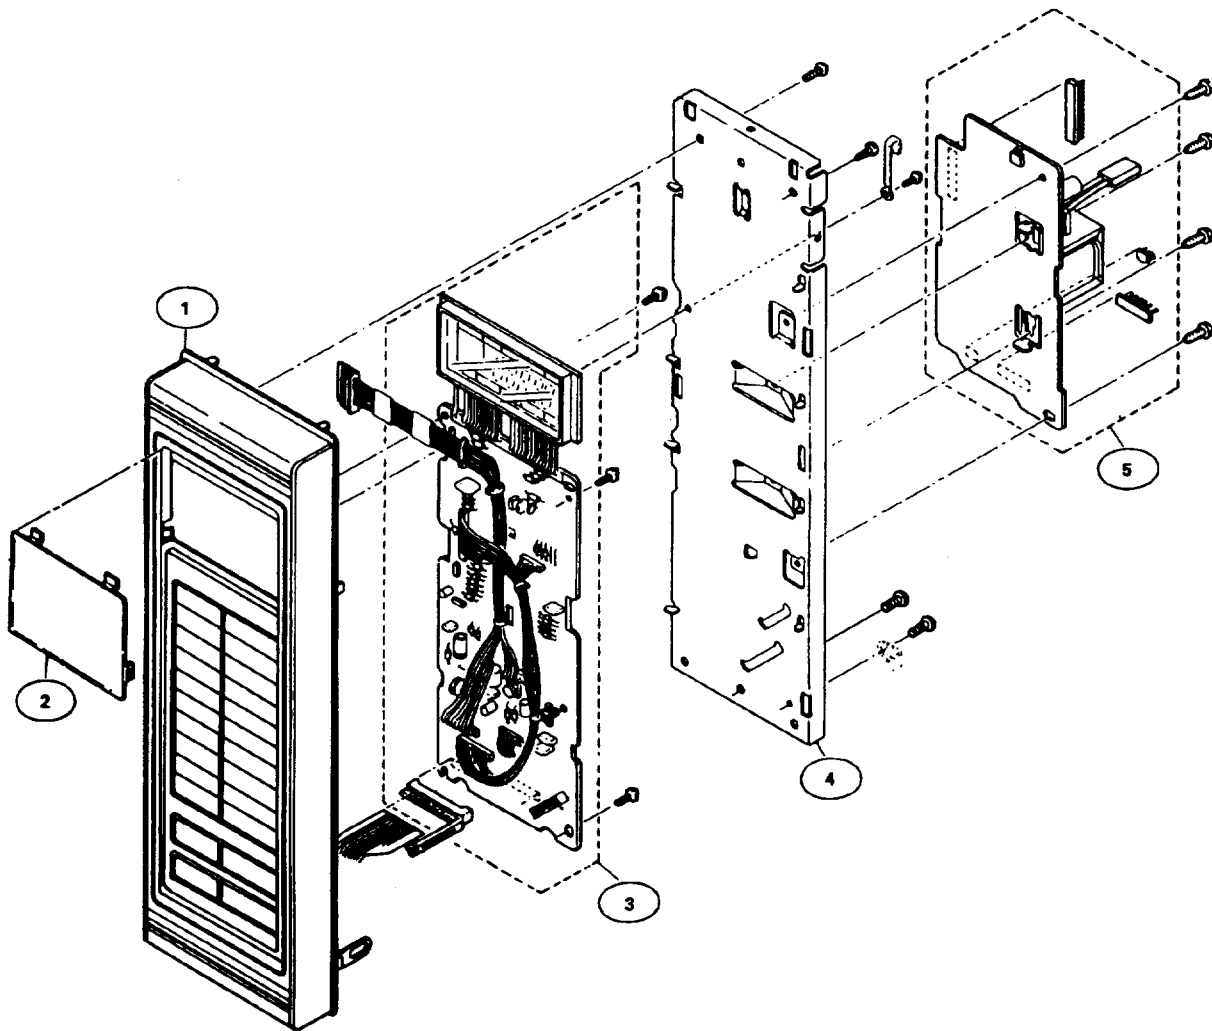


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	4164513	Frame, Control Panel
2	4164484	Filter, Display
3	4164602	Unit, Control
	4164603	Screws, Control Unit Mounting (3)
4	4164485	Plate, Control Panel Back
	4164551	Screws, Control Panel Mounting (3)
	4164552	Screw, Panel Frame Mounting
5	4164604	Relay Unit
	4164550	Screws, Relay Unit Mounting

*Not Illustrated

MICROWAVE DOOR PARTS

For Model: KEMS376SBL1

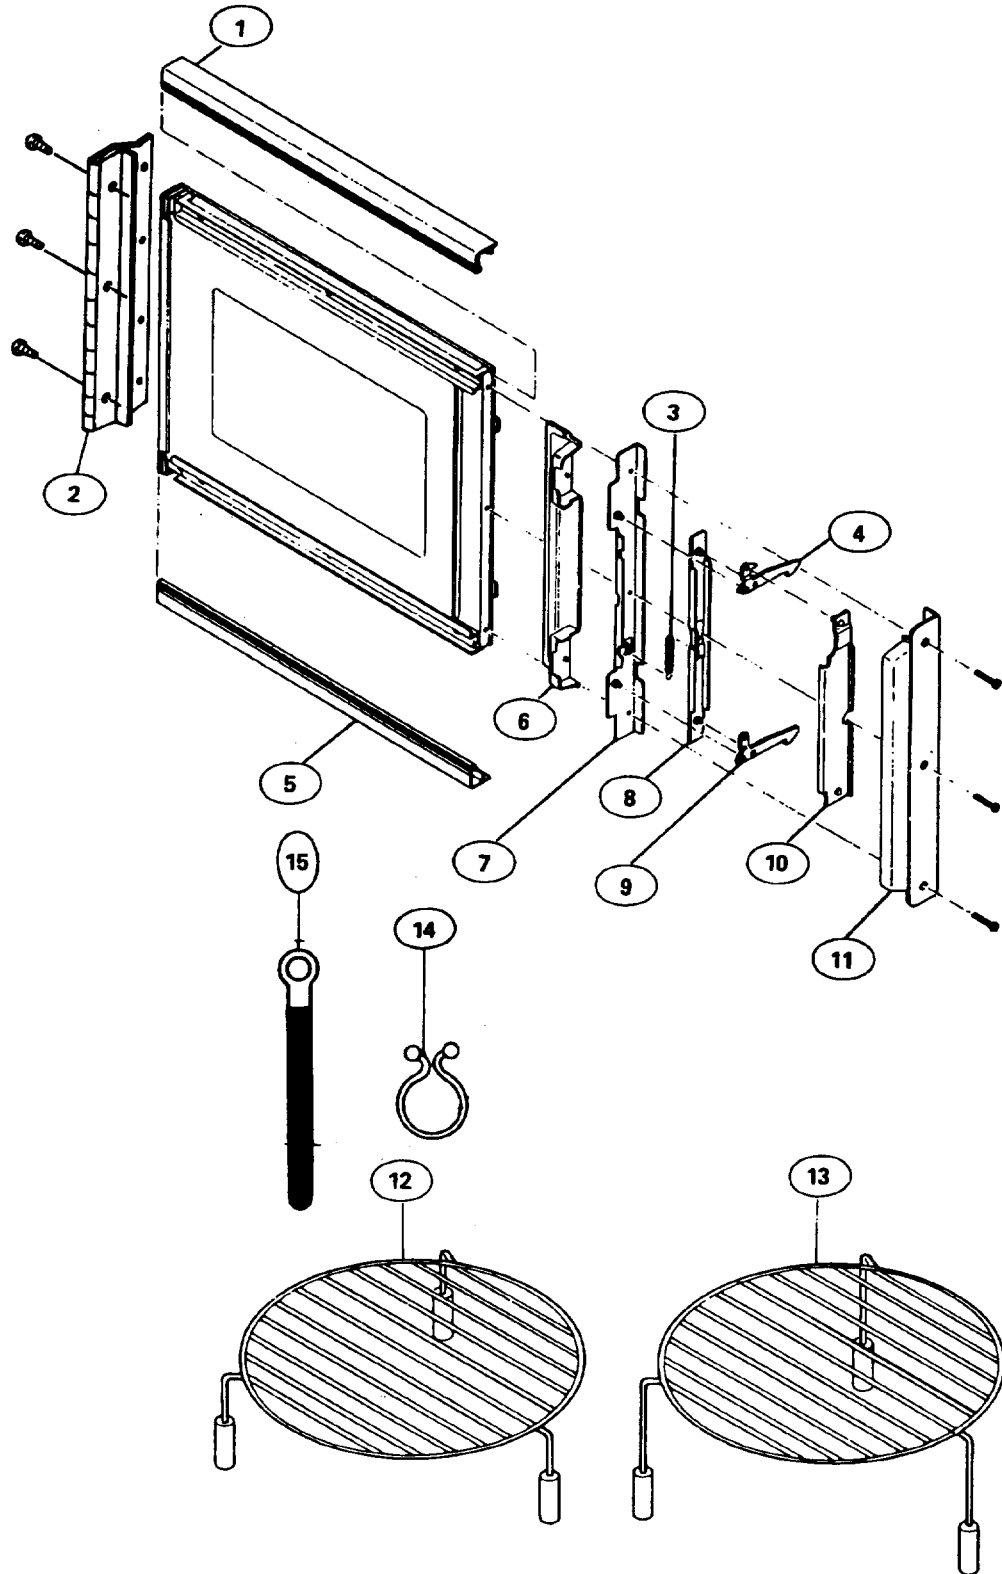


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

	4164487	Door, Complete
1	4164489	Trim, Upper Door
2	4164592	Hinge, Door
	4164594	Screws, Door Hinge Mounting (3)
3	4164495	Spring, Latch
4	4164493	Catch, Upper Latch
5	4164591	Trim, Door Lower
6	4164486	Trim, Door Panel Frame
7	4164490	Plate, Latch
8	4164492	Lever, Joint
9	4164494	Catch, Lower Latch
10	4164491	Lever, Latch Release
11	4164590	Handle, Door
	4164593	Screws, Latch Cover Mounting (3)
12	4164435	Rack, Broiling
13	4164434	Rack, Baking
14	4164519	Wire Tie, Small
15	4164520	Wire Tie, Large

*Not Illustrated

MICROWAVE CABINET PARTS

For Model: KEMS376SBL1

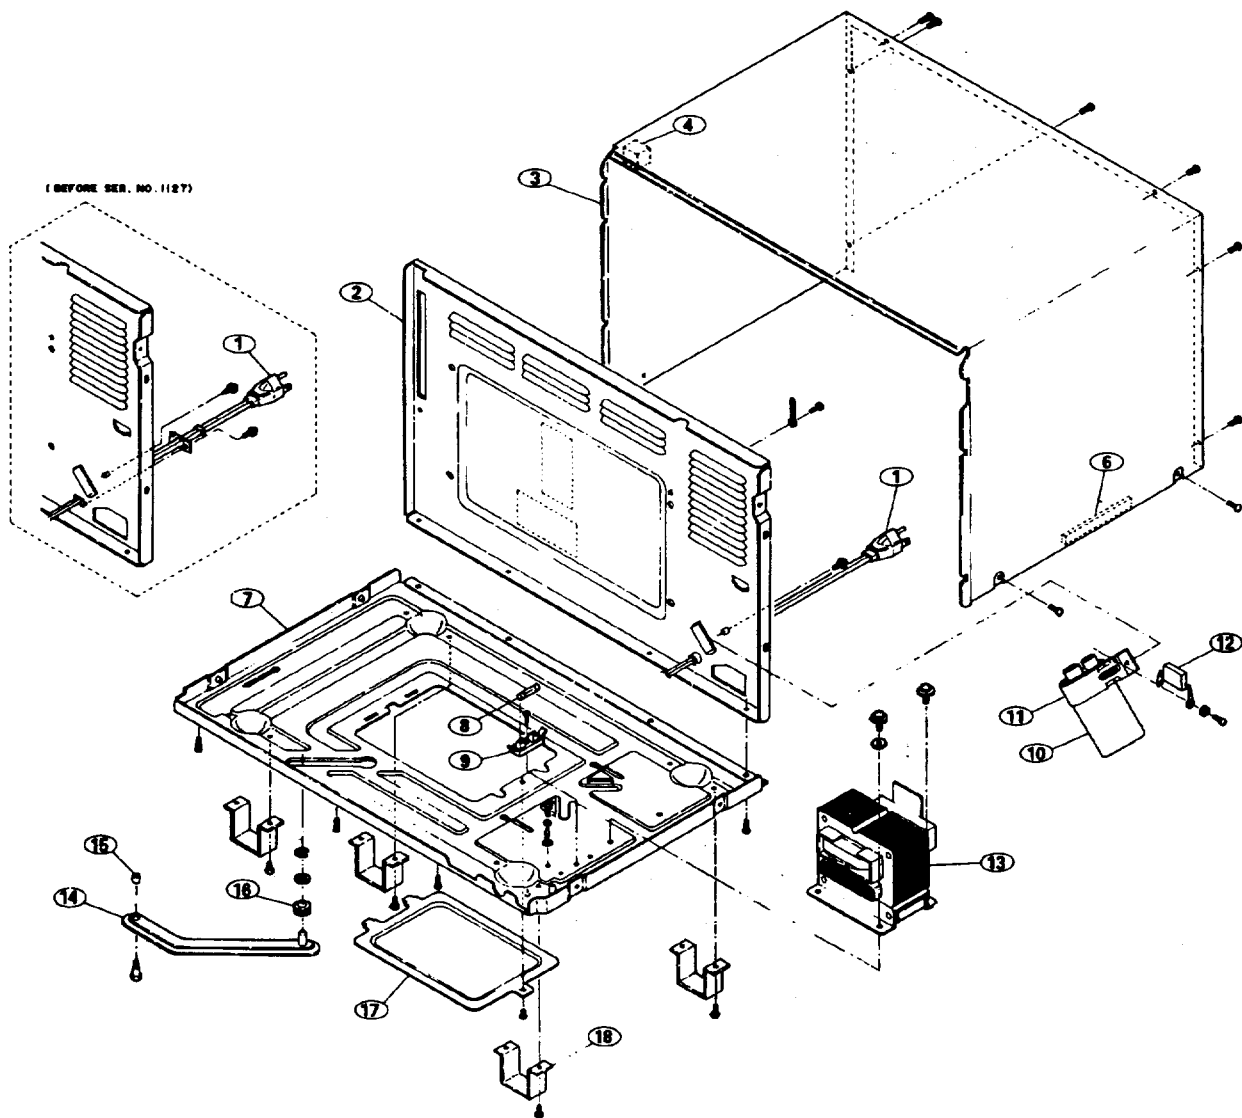


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	4164504	Power Cord
	4164565	Screw, Bushing Holder (Before Serial Number 1127)
	4164547	Screw, Grounding (Power Cord)
	4164605	Washer, Grounding (Power Cord)
2	4164528	Cabinet Back
3	4164529	Cabinet Top & Sides
	4164549	Screws, Cabinet Back, Top And Sides (28)
4	4164530	Seal, Cabinet Side
6	4164531	Seal, Cabinet Lower Side
7	4164527	Base, Cabinet
8	4164510	Fuse, Monitor
9	4164511	Holder, Fuse
10	4164505	Capacitor
11	4164506	Capacitor Strap
	4164567	Screw, Capacitor Strap Mounting
12	4164507	Diode
	4164558	Screw, Dide Mounting
	4164559	Washer, Diode Mounting
13	4164513	Transformer
	4164572	Screw, Trans- former Mounting (2)
	4164579	Washer, Trans- former Mounting
14	4164553	Cam, Door
15	4164588	Spacer, Door Cam
	4164566	Screw, Door Cam Mounting
16	4164554	Roller, Door CAm
	4164555	E-Ring, Door Cam Roller
	4164556	Washer, Door Cam Roller
17	4164518	Cover, Turn- table
	4164548	Screw, Turn- table Cover Mounting
18	4164436	Foot, Cabinet (4)
	4164548	Screws, Cabinet Foot (13)

*Not Illustrated

MICROWAVE OVEN PARTS

For Model: KEMS376SBL1

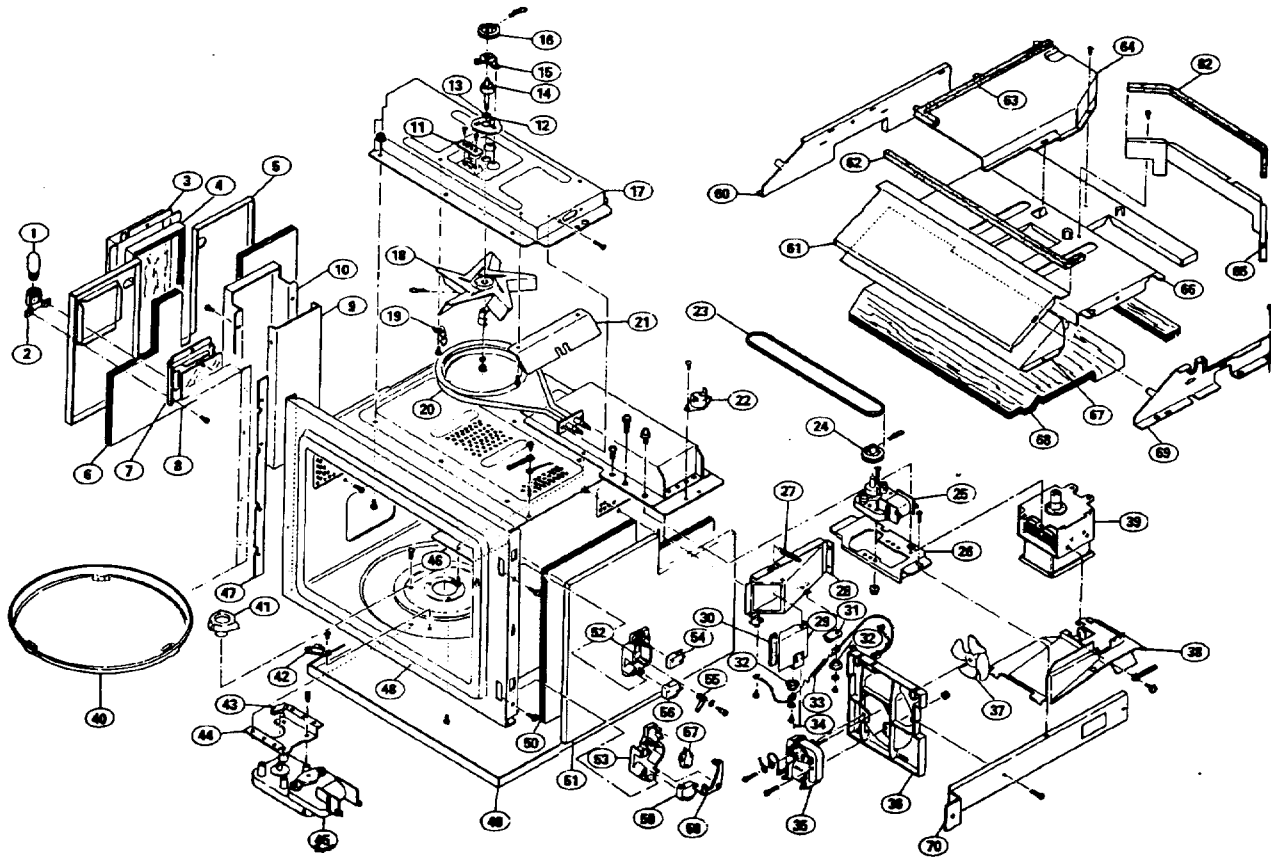

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

1	4164470	Bulb, Oven Light (30 Watt)
2	4164469	Socket, Oven Light
	4164606	Screw, Oven Light Socket Mounting
3	4164611	Cover, Insulation
4	4164475	Insulation, Convection Air Duck
5	4164479	Inner Cabinet Side, Left
6	4164473	Insulation, Left Side
7	4164467	Oven Light Mounting Plate
	4164539	Screw, Oven Light Mounting (2)
8	4164468	Glass, Oven Light
9	4164449	Convection Airguide, Front
10	4164450	Convection Air Guide, Rear
	4164607	Screw, Insulation Cover (16)
11	4164508	Thermistor
	4164574	Screw, Thermistor Mounting (2)
12	4164452	Lower Shaft And Mounting Plate
	4164539	Screw, Mounting Plate Mounting (3)
13	4164472	Shading Cushion
14	4164451	Convection Fan Blade Shaft
15	4164453	Upper Shaft Mounting Plate
	4164539	Screw, Shaft Mounting Plate Mounting (3)
16	4164456	Pulley Fan Shaft
	4164541	Pin, Fan & Pulley
17	4164457	Convection Airguide, Top
	4164545	Screw, Convection Airguide, Top Mounting (6)
	4164543	Nut, Convection Airguide, Top, Mounting
18	4164455	Convection Fan Blade
	4164541	Pin, Fan & Pulley
	4164542	Washer, Convection Fan Mounting
	4164540	Nut, Convection Fan Mounting
19	4164608	Heating Element Holder
	4164538	Screw, Element Holder Mounting
20	4164459	Element, Convection Air
	4164539	Screw, Element Mounting
21	4164458	Convection Airguide End Cap
	4164538	Screw, End Cap Mounting (2)
22	4164512	Fuse, Magnetron Temperature
	4173087	Screw, Temperature Fuse Mounting (2)
23	4164517	Belt, Convection Fan
24	4164516	Fan Motor Pulley
	4164567	Pin, Fan Motor Pulley
25	4164514	Motor, Convection Fan
26	4164515	Plate, Convection Fan Motor Mounting
	4164561	Screw, Convection Fan Motor Mounting (2)
	4164543	Nut, Convection Fan Motor Mounting (2)
	4164548	Screw, Convection Fan Motor Mounting Plate Mounting
27	4164440	Spring, Damper
28	4164443	Duct, Damper
	4164548	Screw, Damper Mounting
29	4164439	Damper
30	4164442	Seal, Damper
31	4164445	Insulator
32	4164444	Insulator
33	4164438	Spring, SMA
34	4164441	Damper Shaft
	4164535	Washer, SMA Spring Mounting
	4164533	Screw, SMA Spring Mounting

35	4164523	Motor, Cooling Fan
	4164561	Screw, Cooling Fan Motor Mounting (2)
	4164563	Nut, Cooling Fan Motor Mounting (2)
36	4164525	Cooling Fan Shroud
37	4164524	Blade, Cooling Fan
38	4164526	Duct, Magnetron Cooling
	4164569	Screw, Magnetron Cooling Duct Mounting
39	4164509	Magnetron
	4164571	Screw, Magnetron Mounting (3)
	4164570	Screw, Magnetron Mounting
40	4164437	Tray, Turntable
41	4164448	Coupling, Turn- table
	4164544	Screw, Turntable Coupling Mounting (3)
42	4164447	Roller, Turn- table (3)
	4164538	Screw, Turntable Roller Mounting (6)
43	4164466	Spacer, Turntable Motor
44	4164464	Plate, Turntable Motor Mounting
45	4164465	Motor, Turntable
	4164609	Screw, Turntable Motor Mounting (4)
46	4164471	Cover, Waveguide
	4164536	Screw, Waveguide Cover Mounting (3)
47	4164485	Plate, Hinge Mounting
	4164564	Screw, Door Mounting (4)
48	4164446	Oven Cavity
49	4164481	Bottom, Inner Cabinet
50	4164474	Insulation, Right Side
51	4164480	Inner Cabinet Side, Left
52	4164496	Hook, Upper Latch
53	4164497	Hook, Lower Latch
	4164501	Screw, Latch Hook Mounting (2)
54	4164501	Switch, Monitor
55	4164498	Lever, Monitor Switch
	4164610	Screw, Monitor Switch Lever Mounting
	4164556	Washer, Monitor Switch Lever Mounting
56	4164500	Switch, Primary Interlock
57	4164503	Switch, Stop
58	4164499	Stop Switch Lever
59	4164502	Switch, Secondary Interlock
60	4164462	Hot Air Duct Left End
61	4164461	Hot Air Duct Front
62	4164521	Hot Air Duct Seal
63	4164522	Sensor Seal
64	4164460	Hot Air Duct Top
65	4164478	Airguide Duct, Rear
66	4164482	Inner Cabinet Top
67	4164477	Airguide Duct, Front
68	4164476	Insulation, Top
69	4164463	Hot Air Duct Right End
70	4164589	Chassis Support

*Not Illustrated